


8 O'CLOCK POSITION

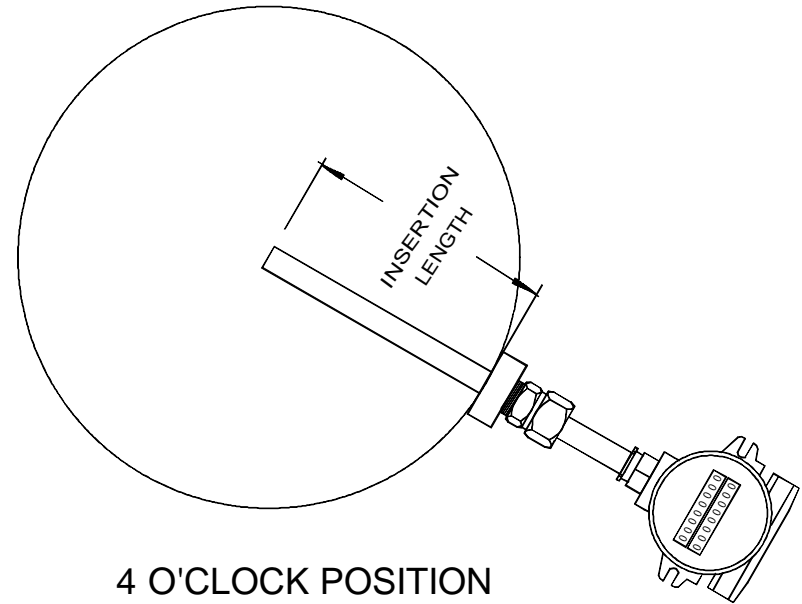

4 O'CLOCK POSITION

**RECOMMENDED INSERTION LENGTHS**

FOR LINE SIZES 1 1/2" TO 2":  
GENTLY INSERT TO BOTTOM  
OF LINE THEN WITHDRAW 1/8",

FOR LINE SIZES 2 1/2" TO 7":  
GENTLY INSERT TO BOTTOM  
OF LINE THEN WITHDRAW 1/4",

FOR LINE SIZES EQUAL TO OR  
GREATER THAN 8", INSERT  
HALFWAY INTO LINE THEN  
INSERT 3" MORE.

**FOR HORIZONTAL FLOW**

IF POSSIBLE POSITION PROBE TYPE FLOW METER  
TO APPROXIMATELY EITHER ANGLE.



**Thermal Instrument Company**

217 Sterner Mill Road, Treviso, PA 19053, USA

<b>DWG NO.:</b> INSTALLATION ORIENTATION LANDFILLS 3-12-19		<b>DESCRIPTION:</b> RECOMMENDED PROBE POSITION ANGLES FOR LANDFILL USE.	
<b>ORIGINATION DATE:</b> 3/12/19		<b>DRAWN BY:</b> MJH	<b>APPROVED BY:</b> MJH
<b>SCALE:</b> NONE		<b>MATERIAL:</b> N/A	<b>PAGE:</b> 1 of 1